



# Samsung NX3000 Lens Assembly Replacement

This guide will show you how to replace the lens assembly on the Samsung NX3000.

Written By: Kelsea Weber



## INTRODUCTION

This guide will show you how to replace the lens assembly on the Samsung NX3000.

We highly suggest you use a [magnetic project mat](#) or an [organization tray](#). This camera has **many** different types of screws and keeping them organized is key to proper reassembly.

---




### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Tweezers](#) (1)
  - [Magnetic Project Mat](#) (1)
-

## Step 1 — Battery



- If you haven't done so already, remove the lens from the camera.
- Turn the camera upside down.
- Slide the button to the left to open the battery compartment.
- Push the blue button up to release the battery.

 The battery is not shown in these photos.

## Step 2 — Lens Assembly



- Remove the four 7.3 mm Phillips screws from the front of the lens assembly.
- Remove the silver ring with tweezers.




## Step 3



- Use tweezers to remove the black plastic ring and small metal ring inside the lens assembly.

## Step 4

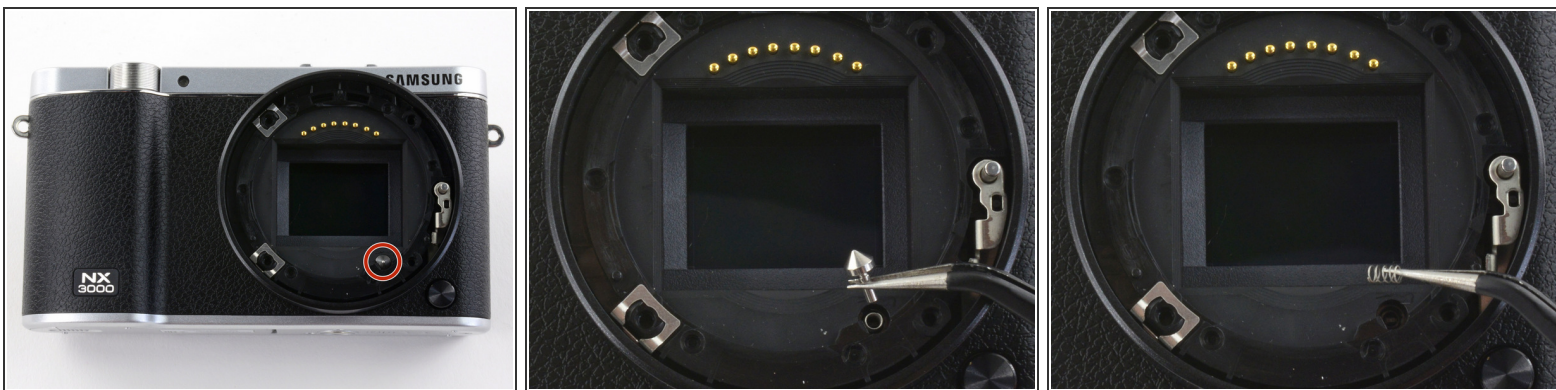

- Use tweezers to lift the pyramid screw and spring from the lens assembly.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 04:50:05 AM.